



## INSTALLATION INSTRUCTIONS FOR DPM TELESCOPIC RECOIL SYSTEMS (External Springs - Close Coils)


**ATTENTION:** Make sure firearm is unloaded, disassemble the pistol. Replace the standard guide rod with the DPM multi springs system (metallic guide rod) as suggested below.

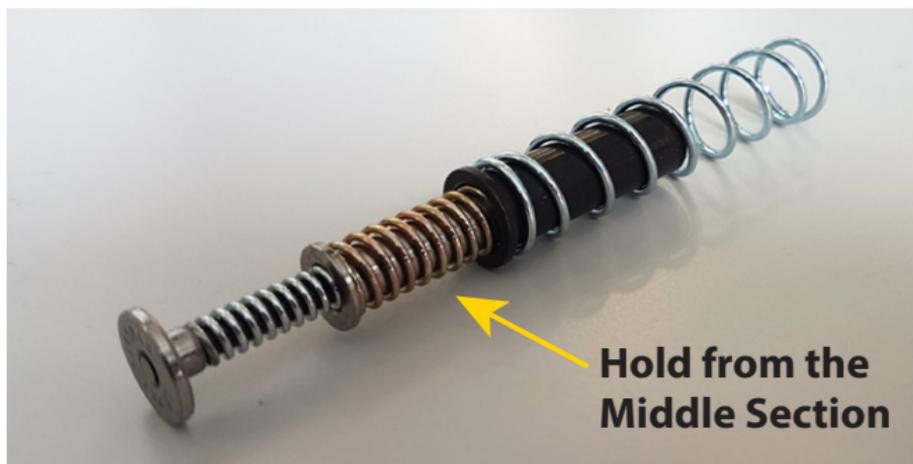


Apply one of the External Springs and hold from the middle section, until the rod passes through the Slide hole for a few millimeters. (Fig. 1 & Fig. 2)

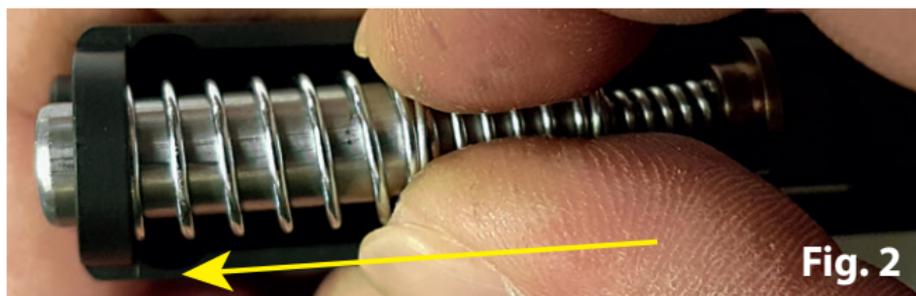

**Let the Rod return carefully (Fig. 3) in the Correct Position on the Barrel (Fig. 4). Reassemble the Pistol. Rack the Slide to Confirm Proper Unrestricted Function.**

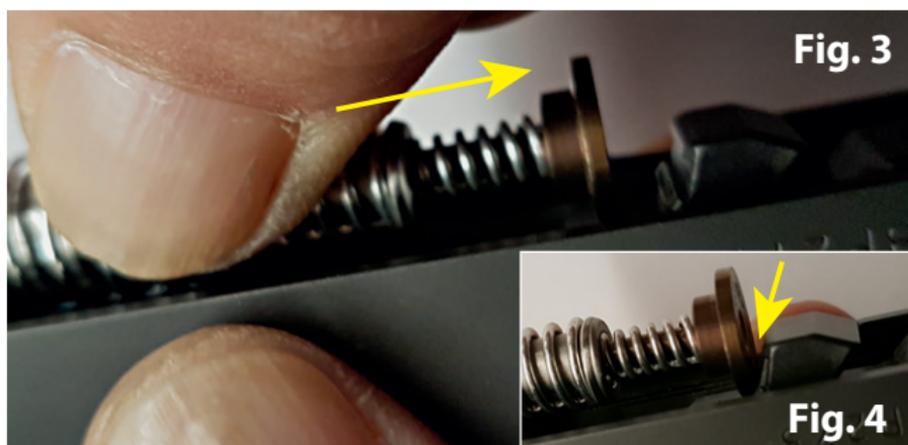

**To Disassemble, Push Forward with your Thumb from the behind to Release the System from the Barrel (Fig. 5) and Carefully Retrieve the System in your other Hand (Fig. 6).**

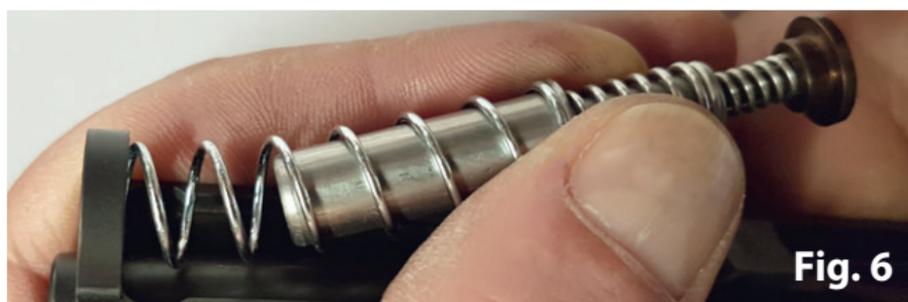

For any questions contact the Dealer who supplied you this product.

Or contact us: [service@dpmssystems.com](mailto:service@dpmssystems.com)

Video instructions: [www.dpmssystems.com/faqs](http://www.dpmssystems.com/faqs) Instructions Telescopic