


INSTALLATION INSTRUCTIONS

DPM BUFFER FOR H&K - G3 - HK91- PTR91


ATTENTION : Use Always the Metallic Backplate Between the DPM Buffer and Your Buttstock, Only with the screws and the washer that are Included with this product. See Specifications Below.

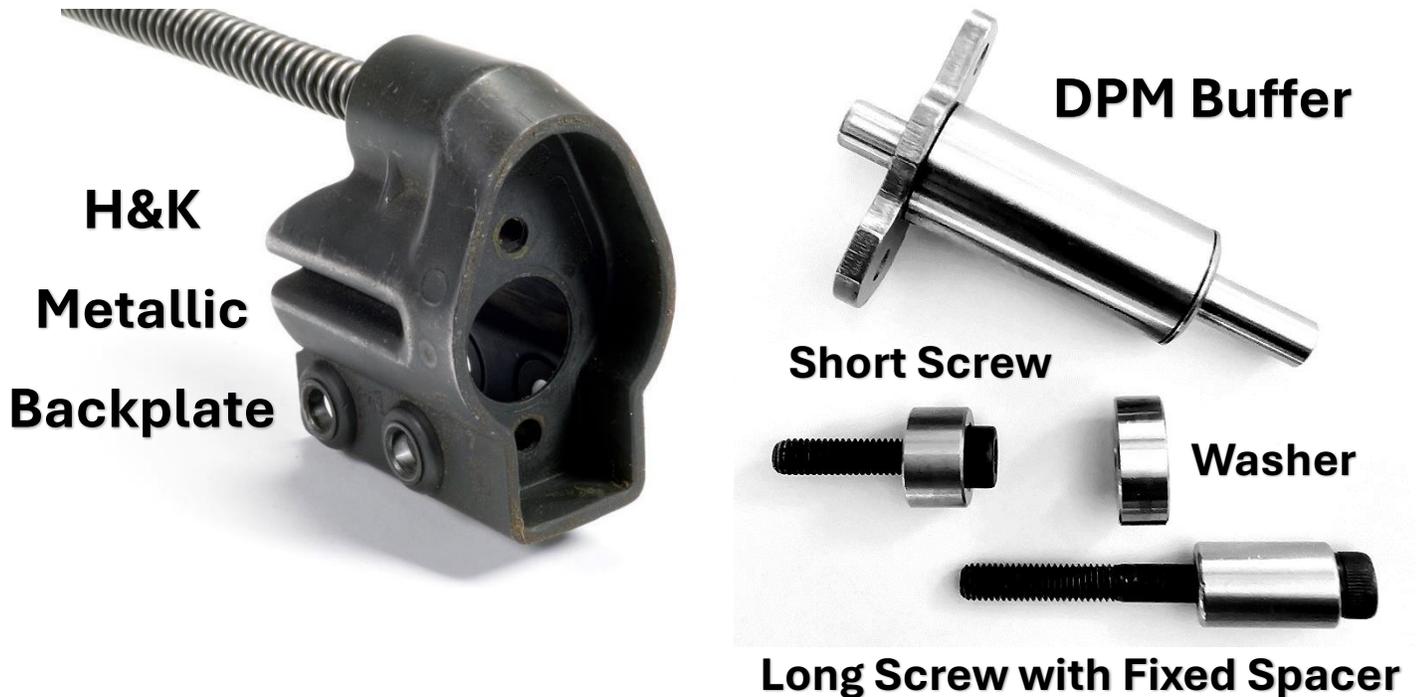

The DPM Buffer Can Be Fixed with the Standard and the Below Aftermarket Buttstocks by Using One (1) of the Screws that Included or with Combination of One Screw and the Washer.

ATTENTION : If you don't see below your Aftermarket Buttstock and you have any worries about the assembly, feel free to contact us : service@dpmsystems.com


FAB DEFENSE POLYMER TUBE

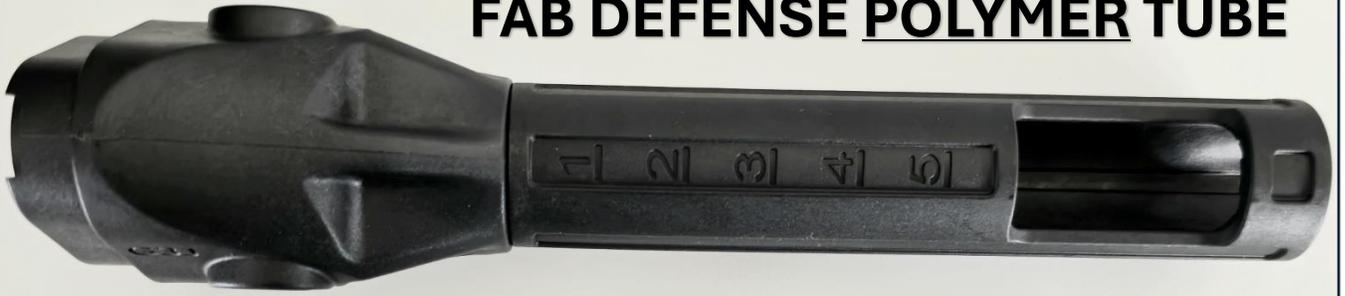


Use the Long Screw with the Fixed Spacer.




FAB DEFENSE ALUMINUM TUBE

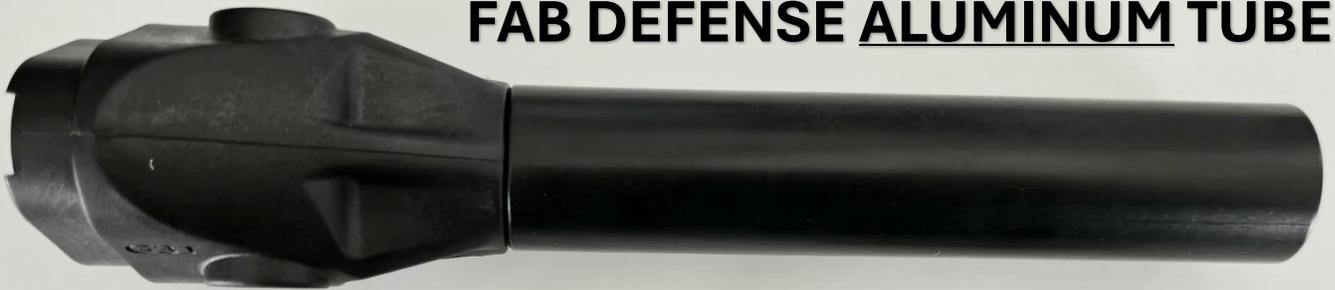

Use the Long Screw with the Fixed Spacer,
and the Washer see the photos below.

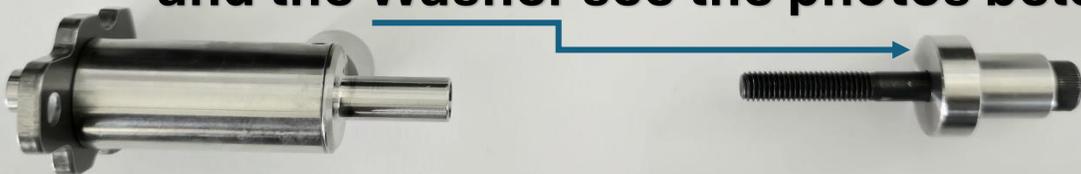

Washer Correct Direction

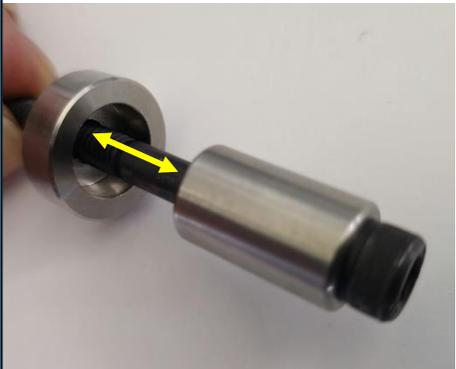

MAGPUL PRS2 G3 RIFLE STOCK



SPUHR R-410 G3 BUTTSTOCK

