

INSTALLATION INSTRUCTIONS GLOGK GEN5 CAPTURED WITH SELF LOCK WASHERS/SPACERS

Captured Recoil Rod



No 1. Washer soft buffer for soft loads and 9mm

No 2. Washer medium buffer for 9mm factory & +P

No 3. Washer hard buffer for 40S&W & 10 Auto & +P

*Feel free to make any possible combination with your ammunition

1. Remove the Factory Guide Rod and place one of the washers to the slide hole (Fig. 1, 2).



Fig. 1



Fig. 2

2a. Ensure that the washer is placed correctly and protrudes about 1mm from the slide (Fig. 2a).




Fig. 2a

3. Place the front side of the guide rod in the washer and compress from the back to lock it on the barrel position (Fig. 3)



Assemble the pistol and rack the slide a few times to check for any unseen interferences and to ensure that the DPM Recoil System operates unrestricted.

4. To remove the washer use the recoil rod and push the washer to come out from the slide hole (Fig. 4a,b).

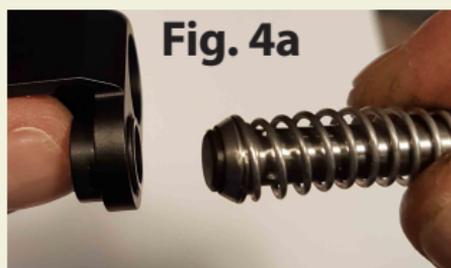

The new, innovative DPM washer/spacer, aside from the adjustability of the system's total force, ensures that the system it will stay in position, making the installation much easier.



For any Questions about the Installation or Operating instructions:
service@dpmsystems.com | www.dpmsystems.com